

bully dog installation instructions


40415 GT GAS

PHYSICAL INSTALLATION

Detailed Instructions

1. Connect The OBDII Adapter Plug to the OBDII Port. See page 6 for a detailed description of the different parts of the OBDII adapter plug.

- Find the OBDII port in your vehicle. As shown in the illustration, the specific location of the port can vary between different vehicles, but it is always somewhere under the driver's side dash. The OBDII port will have the same shape as the end of the adapter plug.
- Once you have found the port, simply connect the adapter plug to it.

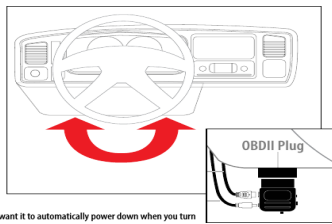

2. Connect The Power Cable. The power cable is not really optional if you want to enjoy the originally designed functions of the GT. It is only optional under one of the following circumstances:

You do not want to keep the GT permanently installed and plan on disconnecting it when you are not actively using the unit.

You want the GT to remain on at all times, regardless of the effect that this could have on your car battery

You prefer physically switching the GT on and off and do not want it to automatically power down when you turn the key to the off position.

Otherwise, in order for the GT to work as originally designed, it is very important for the power cable to be installed as described below:

1. Locate an ignition fuse.

- An ignition fuse is one that is controlled by the position of the key.

- Sometimes we call this a "key-on" or "key-off" fuse.

- The fuse that controls the front windshield wiper is usually perfect, but any fuse that turns off when the key is turned off will work just fine.

- Every vehicle is different. There is no way to provide wiring diagrams for all vehicles. You will be able to find the information for your vehicle in the owner's manual or online.

- Some vehicles have a fuse box inside the cab. If your vehicle does not have a fuse box inside the cab, you will need to locate the fire wall and connect the power cable to the fuse box under the hood.

2. Connect the power cable to the fuse.

- You may have received a fuse tap with your GT. See below for an illustration and instructions on using the fuse tap to install the power cable.

- You can also simply put the power cable into the fuse box along with the fuse that is normally installed in that location. See the diagram and picture for more information.

- If you did not receive a fuse tap, but prefer to use one to install your power cable, you can purchase one at your local auto parts store. Be sure to ask for installation instructions if none are included with the fuse tap.



Using the Fuse Tap and Spade

1. Find and pull the fuse that you are going to use to insert the GT Power Cable.
2. Slip the fuse tap over the prong on the fuse.
3. Fit the spade over the fuse tap and crimp them together with pliers.
4. Put the tapped fuse back into the fuse box.

27

For a complete installation video of this product, visit wolfionline.com and also the Bully Dog youtube page, wolfionline.com View and Download Bully Dog GT owner's manual online. gauge tuner. INSTALLATION Owners Manual Part 1: Physical Installation Part 2: Operations and. Install the tune to your vehicle. See page 32 for more information. IMPORTANT NOTE: You MUST uninstall your Bully Dog engine tune before taking your. TECHNICAL SUPPORT. We are committed to helping you with the issue you are having. We have compiled FAQs and videos to help you with your Bully Dog. This Page is your gateway to all of the latest information on Bully Dog Products, including all of the installation and the frequently asked questions of Tech. Installation Steps. Popular Searches. If there's one name synonymous with truck performance and power, it has to be Bully Dog Performance. In fact, with the. Thank you for purchasing your Bully Dog GT from BMP! Please carefully read these instructions as they give you a quick overview of how to properly install the . Bully Dog recommends installing during business hours: Monday-Friday 7am- 6pm More detailed information is also available in the online Owner's Manual at. (Continued on other side). Toyota Tundra Bully Dog GT Instructions. 1. Install the Update Agent on your personal computer. You can download this software at. Velcro the Bully Dog GT Diagnostic Module Connector to INSTRUCTIONS BELOW STARTING FROM THE BEGINNING. An ECU obtained new from Polaris not previously installed onto an engine comes blank without programming and. 5 days ago bully dog gt tuner manual bully dog gt tuner instructions bully dog gt tuner installation bully dog gauge gt tuner manual bully dog gt tuner diesel. Bully Dog Gauge Pod Installation Instructions - Read more about outlook, pillar, installation, dash, stripping and panel. Tech Tip: For a successful installation of the Bully Dog tuner, you will be required Manufacturer Instructions for Bully Dog Tuner Gas GT Platinum Dodge Ram. TROUBLESHOOTING: If you have questions during the installation of this product , please visit wolfionline.com The latest version of. Power Pup Installation. Installation Steps. INSTALLATION MANuAL. Engine Applications. Part#. C10 L " C11 L " C12 L " If you're looking for power and mileage out of your Paccar big rig, look no further than the Bully Dog ECM Tuner! Installation Instructions. Bully Dog Triple Dog GT tuner is quick and easy to setup. Each unit is sent with install instructions detailing everything from plugging it the programmer, to setting .

[\[PDF\] sex vids](#)

[\[PDF\] wine refrigerator buyers guide](#)

[\[PDF\] casio ctk-620l bedienungsanleitung](#)

[\[PDF\] baby guide book](#)

[\[PDF\] dictionary guide words game](#)

[\[PDF\] diamond dels gem mining](#)

[\[PDF\] sirius satellite inv2](#)